



# EVERJAMB™

# INSTALLATION GUIDE

Congratulations on your purchase of a ready-to-install EverJamb™ exterior door frame. In addition to the components in this frame kit, you will need one casing set to trim out your door opening.

## REQUIRED TOOLS TO INSTALL

- Safety Glasses
- Hammer
- Hand Saw
- Nail Punch
- Tape Measure
- Level
- Framing Square
- 8 p Finish Nails
- 16p Finish Nails
- Wood Shims
- Wood Putty
- Sandpaper

## INSTALLATION INSTRUCTIONS

### 1. Measure the rough opening

#### WIDTH

- If necessary, trim length of header accordingly to fit rough opening width (the header supplied is for a standard 3/0 frame - accepts 36" wide standard door). The rough opening width (stud-to-stud) should be at least 1" greater than overall frame width.




#### HEIGHT

- ALWAYS MEASURE FROM THE SUBFLOOR TO THE FRAMING HEADER. The subfloor is either a cement slab or the wood surface beneath the underlayment (surface over which your carpet or finished floor is applied). Jamb supplied is 83", therefore requiring a rough opening of 83-1/2" minimum. For rough openings less than 83 1/2", simply subtract-1/2" from height of opening and cut jambs (FROM WOOD END OF JAMB, DO NOT TRIM PVC END OF JAMB) to that measurement.


*Note: Some door panel & sill assemblies may require specific jamb dimensions.*

- ### 2. Dado the wood end of jambs to accept the frame head. Cut 1-1/4" from the stop portion of each jamb to ensure proper assembly (see illustration at right).

- ### 3. Nail frame head to jambs using 8 p finish nails. If a sill is to be used (must purchase separately), you may nail or screw sill into place now (be sure to frame. Please note, though jambs are prepped to fit with a standard inswing sill, some detail prep of the frame and/or sill may be necessary. If you have a concrete slab, you can opt to use a threshold only).

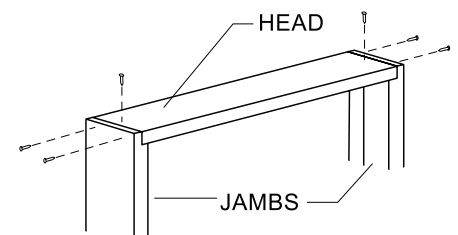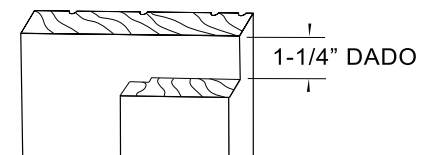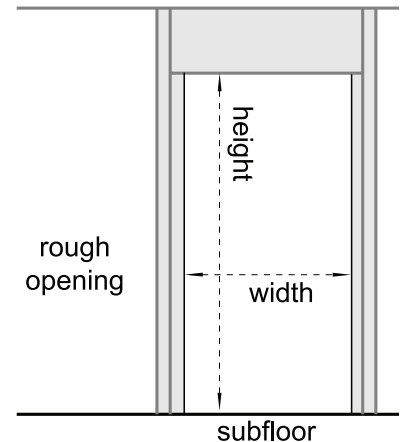

4. You are now ready to place your EverJamb into the rough opening.
5. Wedge shims into place, first a pair on each bottom side to stabilize the frame. Insert shims as shown until jambs are exactly vertical. Three to four sets of shims per jamb is recommended. Be sure to shim behind hinges and lock placement.
6. Use 16 p finish nails to fasten your EverJamb through the shims and into studs. Use a nail punch to countersink nail heads below frame surface. Apply wood putty,sand surface and clean as necessary prior to finishing.

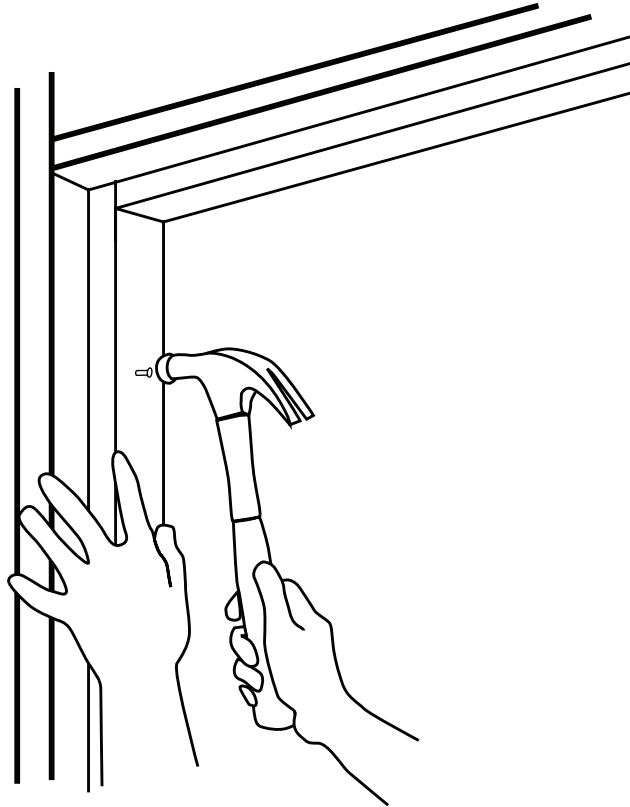

#### The EverFrame® Warranty

Evermark, LLC warrants their EverFrame® exterior doorjamb products (which include EverJamb® and EverMull®) against end rotting, for a period of twenty five (25) years from the date of manufacture. Should deterioration due to rotting occur, rendering the jamb unable to support a hinge or sill, Evermark, LLC will replace the jamb without cost to the consumer for parts. Proof of purchase is required. This warranty applies to EverFrame® products used in residential construction and to the original homeowner only, for a period not to exceed 25 years. This warranty does not cover defects in the finish or damage caused by improper painting, caulking, or installation. This warranty is void if product is damaged through improper or unreasonable use. This warranty is void if product is trimmed on the PVC end. The EverFrame® are not covered in warranty for not properly maintaining the door system or its components. Storm door installations, associated with our product, require sufficient ventilation to eliminate excessive heat build-up in the airspace between both doors. Failure to comply with this requirement voids this warranty. Please note: all exposed surfaces of the EverFrame® must be painted with exterior grade paint within 60 days of installation, failure to do so will void this warranty. It is a requirement of this warranty that the customer keeps and provides all invoices, receipts, and other relevant documents received at the time of purchase or for the maintenance of the door system and its components.

†This Product incorporates the patented FRAMESAVER® technology, under license from Endura Products, Inc., of Colfax, NC, and may be covered by one or more of the following U.S. Patent Numbers: 5,661,943; 5,873,209; 5,950,391; 6,122,882; 6,425,222; 6,446,410; 7,100,339 and foreign equivalent patents.  
2020 Evermark, LLC. Evermark reserves the right to make changes in design, material and specifications as well as discontinue products without notice.