



EQUIPMENT NEEDED FOR INSTALLATION:


- Hammer
- Measuring Tape
- Pencil
- Lag Screws or 16 Penny Nails
- Construction Adhesive
- 2" Finishing Nails

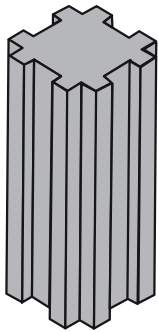


1 This Newel Post includes a wood installation/mounting block. It is inserted into the bottom hollow block of the newel base.

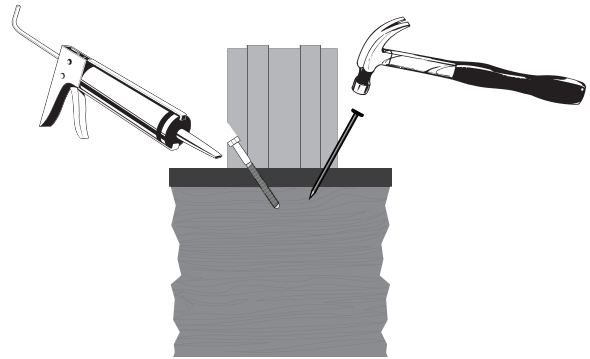

2 Set newel block at desired location. Glue in place with Construction Adhesive, then drill lag screws or 16 penny nails in sides of block for permanent placement.

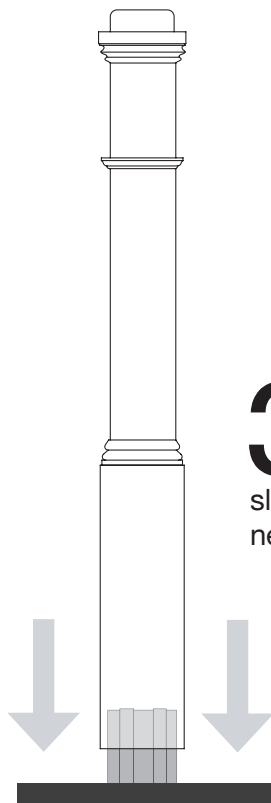

3 Cut Box Newel to required height to accept handrail, then slide hollow end of box newel over mounting block.

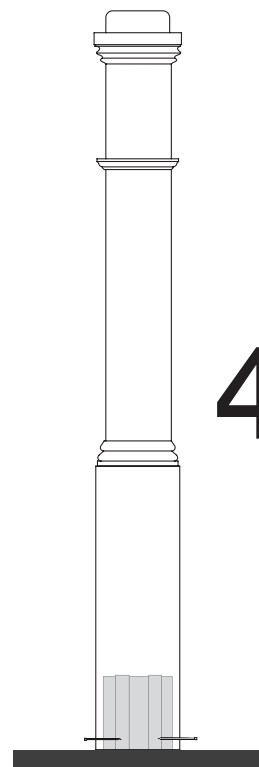

4 Once newel is seated over mounting block, and attach with finish nails.